



**Relifix**

Installation instructions

Montageanleitung

Notice de montage

Manual de instrucciones  
de montaje

Manual de montagem

Istruzioni di montaggio

Montagehandleiding

Monteringsvejledning

Monteringsanvisning

Monteringsanvisning

Asennusohje

Instrukcja montażu

Návod k montáži

Szerelési útmutató

Navodila za montažo

Instrucțiuni de montaj

Montaj Talimatı

# Installation instructions

## Table of contents

<b>1 User information . . . . .</b>	<b>2</b>
1.1 Field of application . . . . .	2
1.2 Used labels and symbols . . . . .	2
1.3 Safekeeping of documents and actuality . . . . .	2
1.4 Intended use . . . . .	2
1.5 EC conformity . . . . .	2
1.6 Applicable documents . . . . .	2
1.7 Customer service and spare parts . . . . .	2
<b>2 Safety instructions . . . . .</b>	<b>3</b>
2.1 Representation and layout of warning instructions . . . . .	3
2.2 Danger grading of warning instructions . . . . .	3
2.3 Basic safety instructions . . . . .	3
2.4 Limitations of use . . . . .	3
2.5 User obligations . . . . .	3
<b>3 Transport and storage . . . . .</b>	<b>3</b>
<b>4 Structure . . . . .</b>	<b>3</b>
<b>5 Installation . . . . .</b>	<b>4</b>
5.1 Installing the Relifix V 31.5 . . . . .	4
5.2 Installing the Relifix V 516 . . . . .	6
5.3 Installing the Relifix V 410 . . . . .	7
5.4 Installing the Relifix V 416 . . . . .	9
5.5 Installing the Relifix V 135Y . . . . .	10
5.6 Installing the Relifix V 56 . . . . .	12
5.7 Installing the Relifix V 150 . . . . .	13
5.8 Installing the Relifix V 506Y . . . . .	15
5.9 Installing the Relifix V 525 . . . . .	16
5.10 Installing the Relifix V 525Y . . . . .	18
<b>6 Maintenance . . . . .</b>	<b>19</b>
<b>7 Taking out of operation . . . . .</b>	<b>19</b>
<b>8 Disposal . . . . .</b>	<b>19</b>
<b>9 Technical data . . . . .</b>	<b>19</b>



The original installation instructions are written in German.  
The translations are based on these original installation instructions.

GB

DE

FR

ES

PT

IT

NL

DK

NO

SE

FI

PL

CZ

HU

SI

RO

TR

## 1 User information

Before the product is used for the first time, all persons who will be using the product must have carefully read and understood the installation instructions.

This documentation as well as translations hereof are the property of the HellermannTyton Group. Replication, editing, reproducing or distribution in whole or in parts for purposes other than following the original intended use requires the prior written consent from the HellermannTyton Group.

### 1.1 Field of application

The installation instructions are directed towards technicians and the user. The installation instructions only apply for the products in the Relifix series, called "product" in the following:

TYPE	Article-No.
<b>Relifix V 31.5</b>	435-00650
<b>Relifix V 516</b>	435-00655
<b>Relifix V 410</b>	435-00652
<b>Relifix V 416</b>	435-00653
<b>Relifix V 135Y</b>	435-00657
<b>Relifix V 56</b>	435-00654
<b>Relifix V 150</b>	435-00651
<b>Relifix V 506Y</b>	435-00658
<b>Relifix V 525</b>	435-00656
<b>Relifix V 525Y</b>	435-00659

### 1.2 Used labels and symbols

In these instructions, different labels and symbols are used in the text. These are explained in the following:

- Symbol for an enumeration
- ▶ Symbol for an instruction

- 1 First step
- 2 Following steps

- Outcome

Display text/screen text

→ Cross reference

 Texts with this symbol contain information on environmental protection.

 Texts with this symbol contain additional information.

### 1.3 Safekeeping of documents and actuality

► Keep these instructions as well as all other supplied documents in a safe place, so that they are available at any time.

► Please note:

Due to the continuous development of the products, there may be deviations between the documentation and the product. The current edition can be found at [www.HellermannTyton.com/site/downloads](http://www.HellermannTyton.com/site/downloads).

### 1.4 Intended use

The product is only intended to establish underground and above-ground cable connections.

The product may only be installed by trained specialised personnel according to the installation instructions. The specifications contained in these installation instructions are based on our current state of research and development.

Due to the diversity of workmanship and use possibilities, the user must check the suitability of the product for the intended purpose.

The product may only be used for the purposes described in these installation instructions. The product may only be used in technically perfect condition in accordance with its intended use and the installation instructions, and only by competent persons who are fully aware of the risks involved.

### 1.5 EC conformity

The product fulfills the requirements in accordance with:

- Test methods and requirements for cable-accessories DIN EN 50393
- Glow-wire flammability test method for end-products DIN EN 60695-2-11

### 1.6 Applicable documents

The nonverbal installation instructions must be observed for every product.

### 1.7 Customer service and spare parts

If you have any questions or suggestions, please contact HellermannTyton. The contact data is listed at the end of this documentation.

## 2 Safety instructions

The product was manufactured according to the current state of technology and the recognised safety regulations. Nonetheless, use of the product can result in hazards to the life and limb of the user or third persons, or in damage to the device and other material property.

These operating instructions contain information on safety.

- Always follow all of the instructions to prevent personal injury, material damage or environmental damage.

### 2.1 Representation and layout of warning instructions

The warning instructions relate to actions and are structured as follows:

#### **DANGER**

##### Type and source of danger!

Explanations on the type and source of danger.

- Precautions to prevent danger.

### 2.2 Danger grading of warning instructions

The warning instructions are graded according to the severity of their danger. In the following, the danger grading is explained with the corresponding signal words and warning symbols.

#### **DANGER**

Immediate risk of lethal or serious injuries.

#### **WARNING**

Possible risk of lethal or serious injuries.

#### **CAUTION**

Possible slight injuries.

#### **NOTE**

Damage to the product or the surroundings.

### 2.3 Basic safety instructions

The following safety instructions apply generally when handling the product.

#### Danger of electric shock

A faulty or incorrectly installed power supply line can lead to lethal injuries.

- Check the voltage:  
0.6/1 (1.2) kV.

### 2.4 Limitations of use

- Observe the following requirements for the operational environment:
  - The product may only be used between -20 °C and +90 °C.

### 2.5 User obligations


The user must observe and comply with the respectively applicable national legal regulations and accident prevention regulations.

## 3 Transport and storage

The product must be protected from humidity, direct sunlight and extreme heat. Do not stack heavy objects on the packaged product. The product has an unlimited shelf life.

## 4 Structure

The figure shows the structure of the product based on the example of the V 31.5.

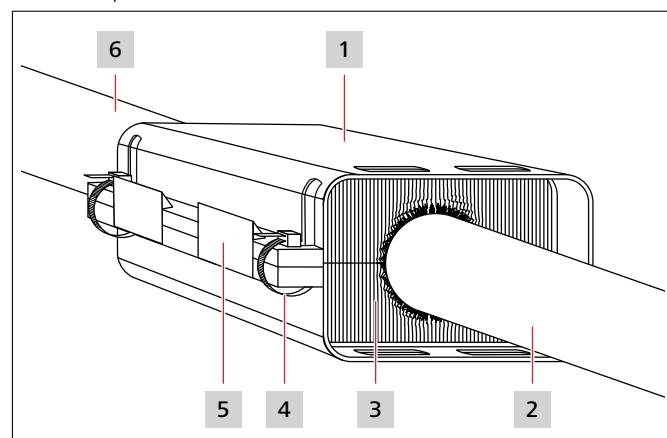

Structure.

- 1 Shell
- 2 Main cable 1
- 3 Brush seal
- 4 Cable tie
- 5 Locking mechanism
- 6 Main cable 2

## 5 Installation

### DANGER

#### Danger of lethal electric shock!

There is a risk of lethal injury when touching live cables.

- ▶ Disconnect the cable from the power supply before installing the product.
- ▶ Only connect the product to a properly installed and standardised cable.
- ▶ Check the voltage-level and current requirements.

The following tools are required for the start-up of the product:


- Cable knife or stripping plier
- Screwdriver or crimping plier
- Allen key 6 mm (included depending on the product)

**i** If transport damage has been found or if the scope of delivery was incomplete, please contact Customer Service at HellermannTyton.

### 5.1 Installing the Relifix V 31.5


Proceed as follows:

- 1 Strip the cables as shown in the figure and align the cores.

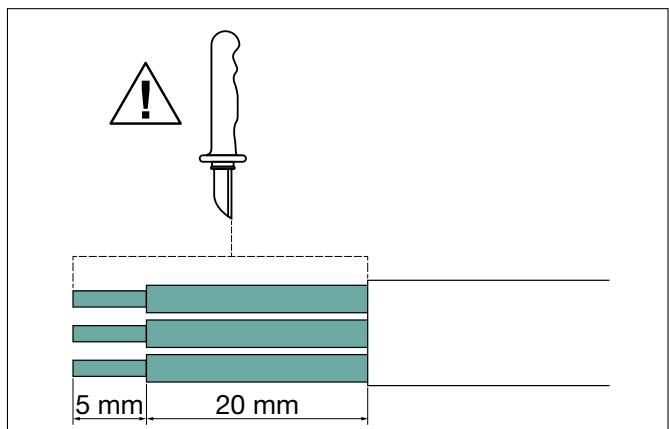


Stripping the cables.

- 2 Align the cores before connecting.

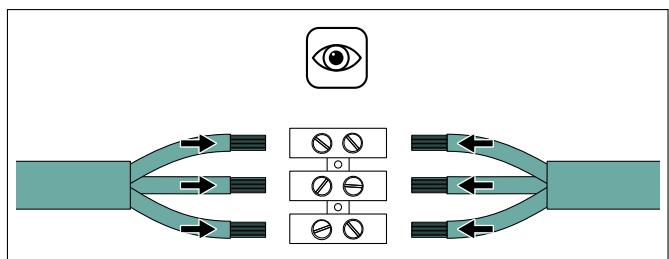


Aligning the cores.

- 3 Connect the cores with the connector block.

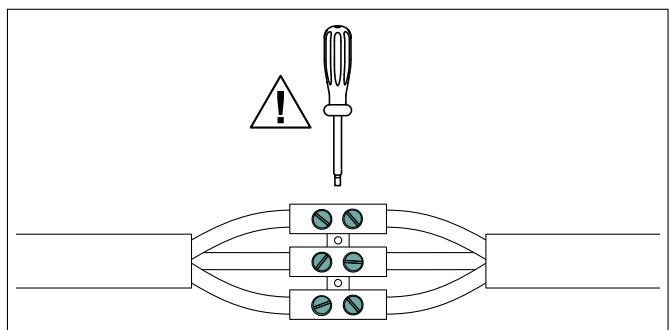


Connecting the cores.

- 4 Open the shell.

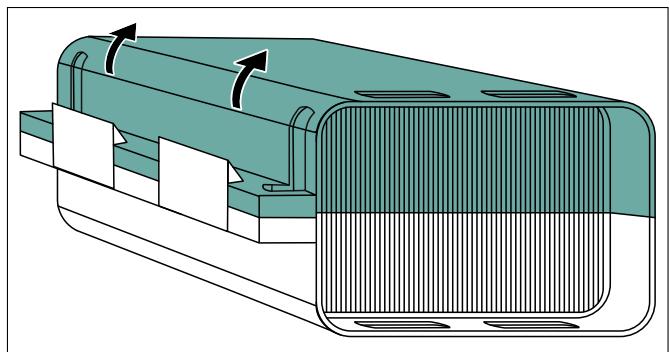


Opening the shell.

- 5** Cut-in all four brush seals according the diameter of the cables.

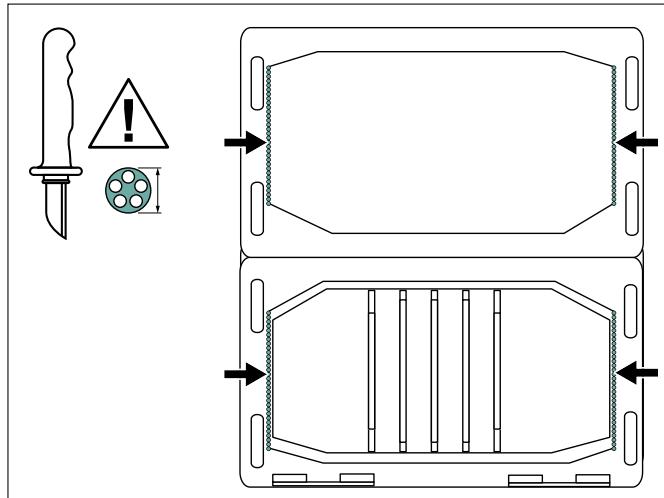


Cutting the brush seals.

- 6** Position the connector block between the higher ribbed markings in the shell.

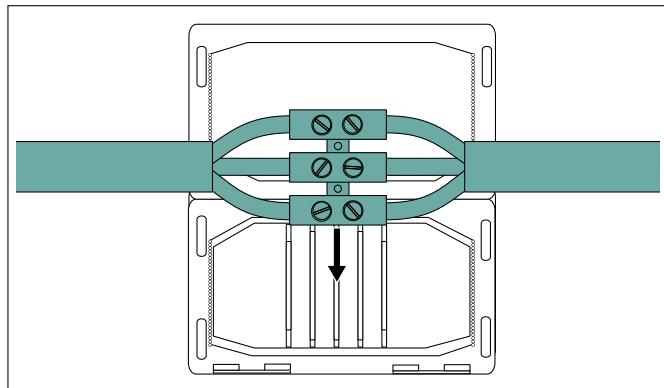

Inserting the connector block.


- 7** Close the shell until the locking mechanism engages.

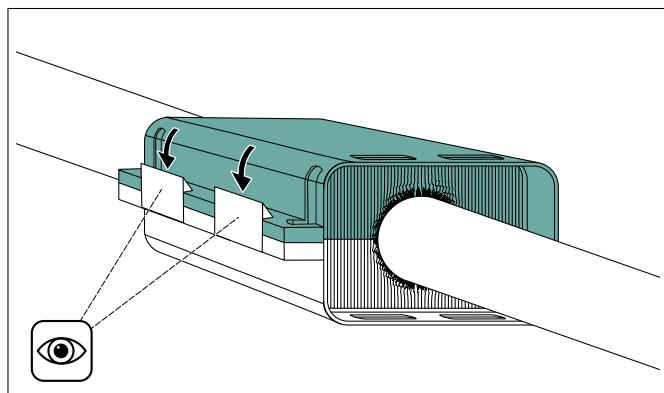

Closing the shell.

- i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfectly protected against dirt and moisture.

- 8** Secure the shell with cable ties against accidental opening.

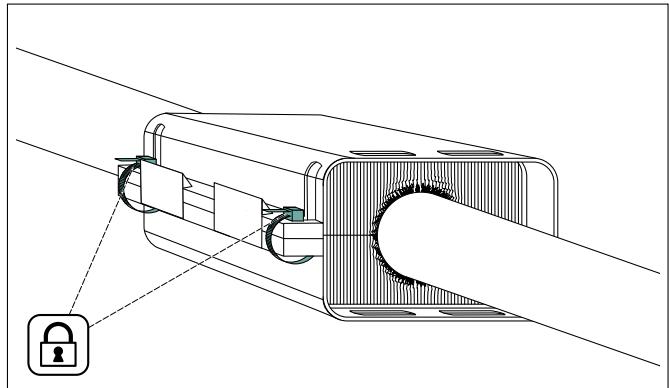

Securing the shell with cable ties.


- The product has been successfully installed.

# Installation

## 5.2 Installing the Relifix V 516


Proceed as follows:

- 1 Strip the cables as shown in the figure and align the cores.

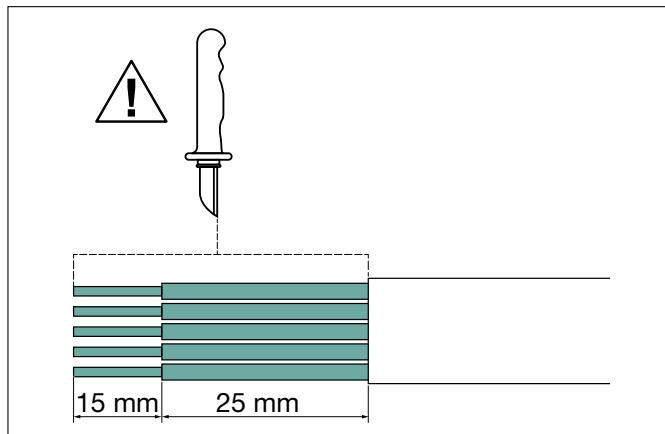

Stripping the cables.


- 2 Align the cores before connecting.

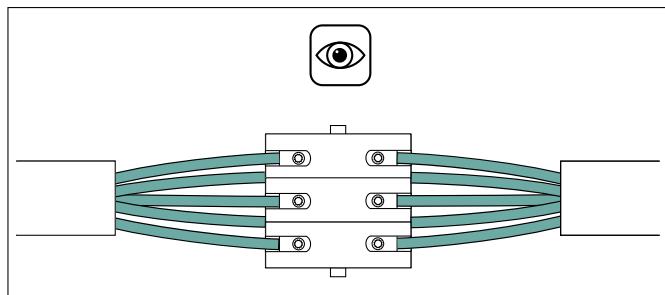

Aligning the cores.


- 3 Connect the cores with the connector block.

- Note the tightening torque of 3 Nm.

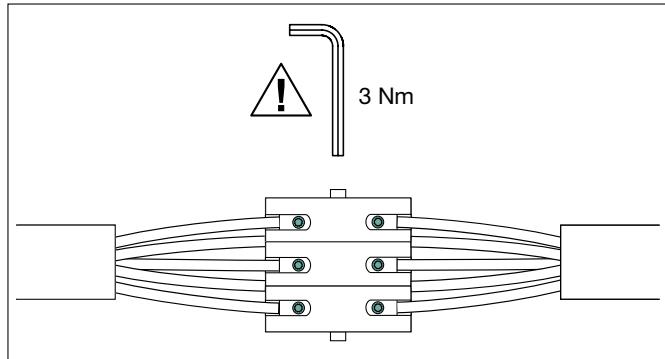


Connecting the cores.

- 4 Open the shell.

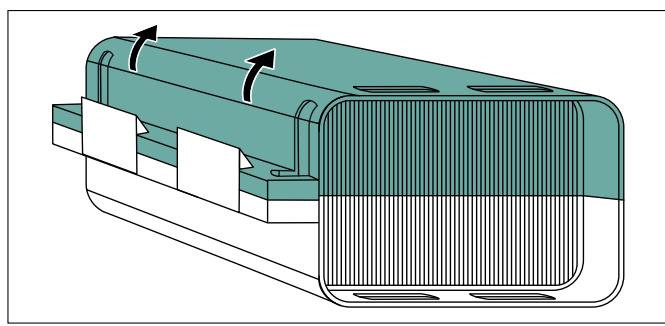


Opening the shell.

- 5 Cut-in all four brush seals according the diameter of the cables.

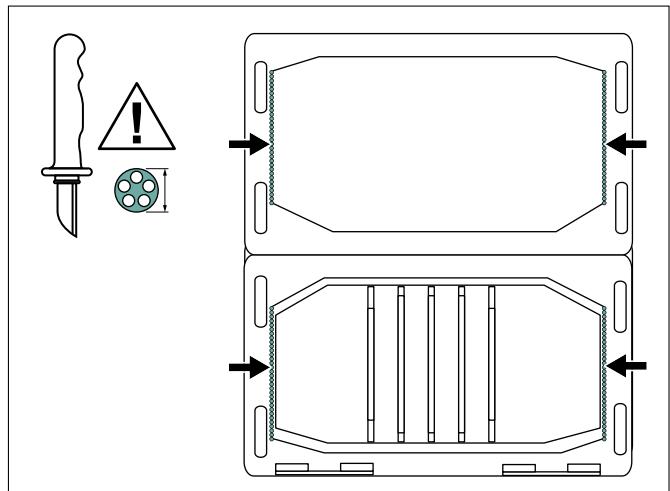


Cutting the brush seals.

- 6 Position the connector block between the higher ribbed markings in the shell.

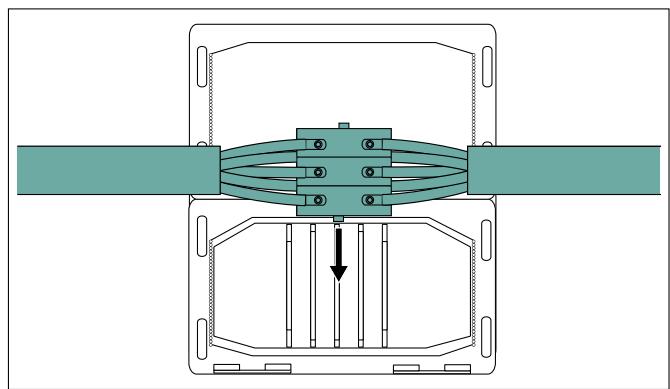

Inserting the connector block.


- 7 Close the shell until the locking mechanism engages.

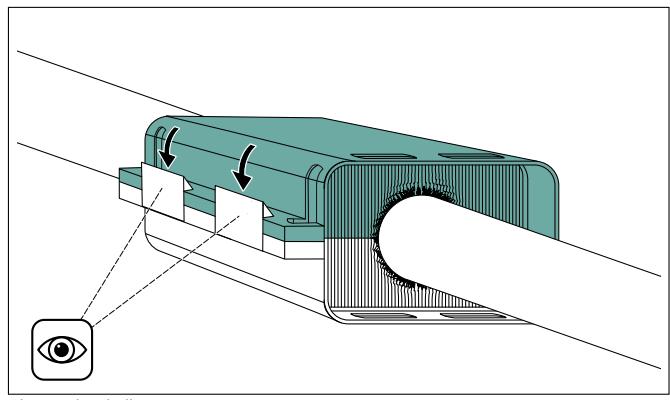

Closing the shell.

- i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfectly protected against dirt and moisture.

- 8** Secure the shell with cable ties against accidental opening.

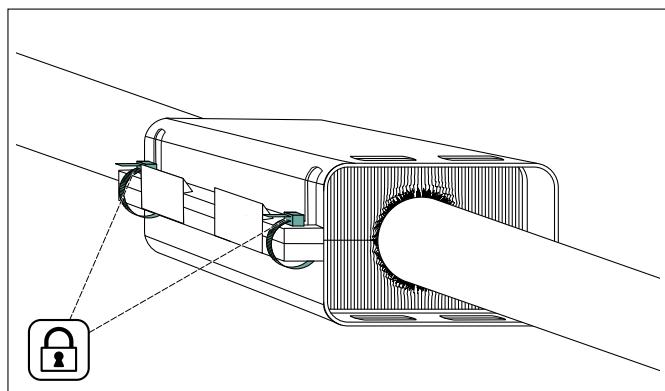


Securing the shell with cable ties.

- The product has been successfully installed.

### 5.3 Installing the Relifix V 410


Proceed as follows:

- 1 Strip the cables as shown in the figure and align the cores.
- A: Straight through connection
- B: Branch connection

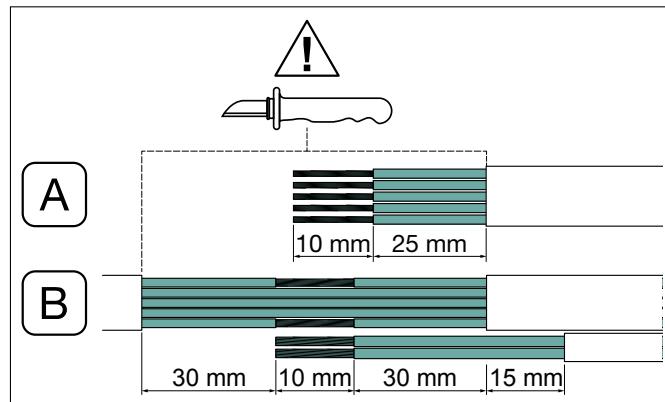


Stripping the cables.

- 2 Align the cores before connecting.

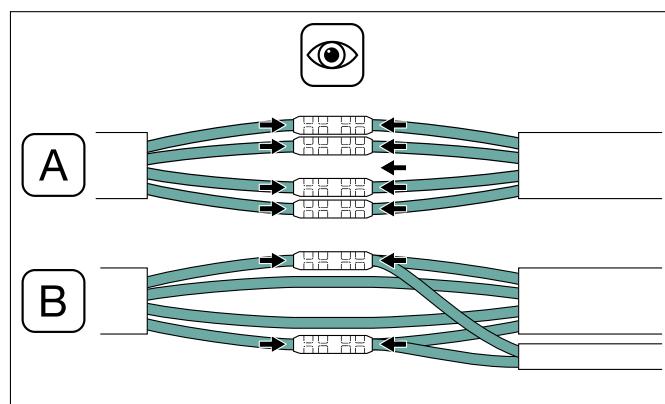

Aligning the cores.

- 3 Connect the cores with the matching press connectors and right tool.

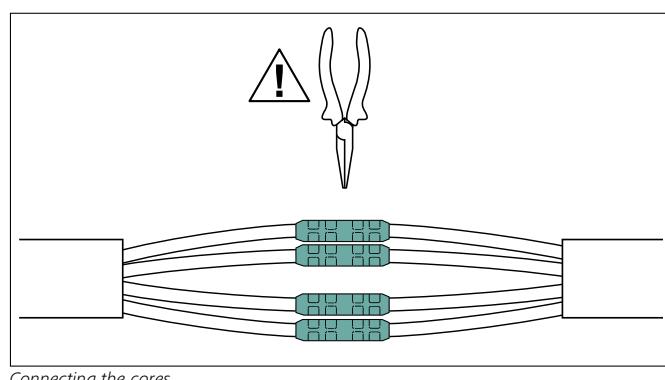

Connecting the cores.

GB

DE

FR

ES

PT

IT

NL

DK

NO  
SE

FI

PL

CZ

HU


SI

RO


TR

## Installation

- 4 Open the shell.

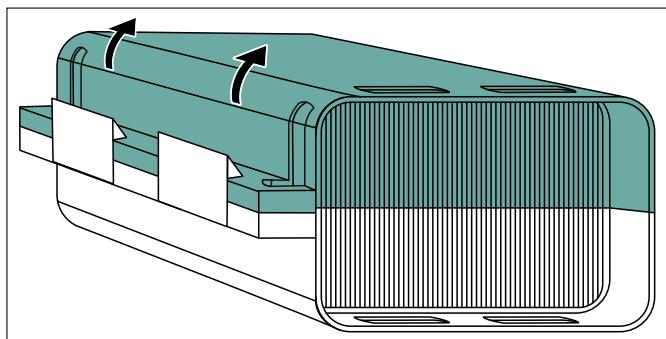


- 5 Cut-in all four brush seals according the diameter of the cables.

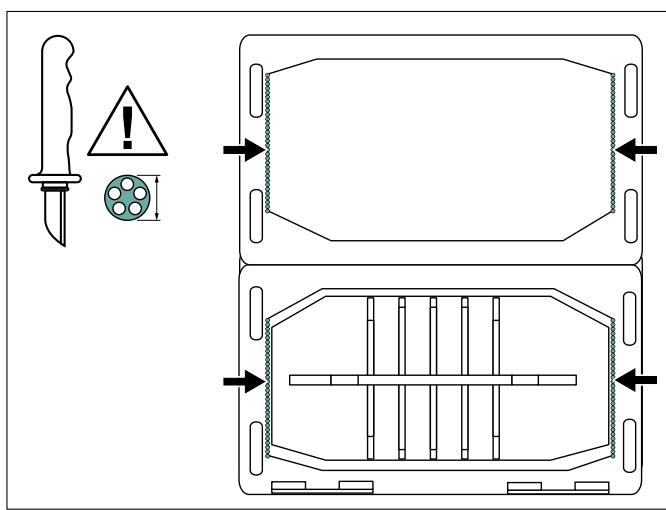


- 6 Position the connector block between the higher ribbed markings in the shell.

- Use the partition plate for cables with three or four cores.

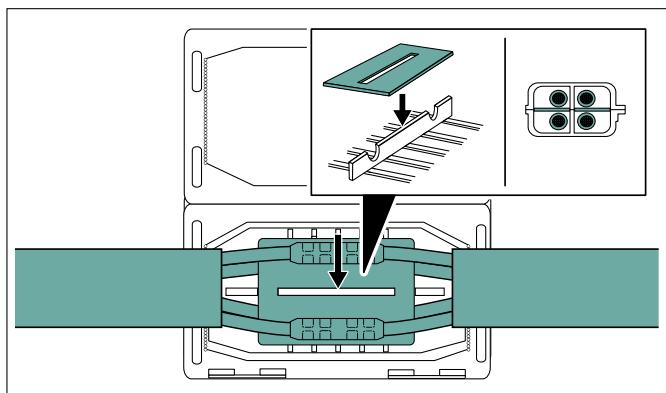


Inserting the connector block.

- 7 Close the shell until the locking mechanism engages.

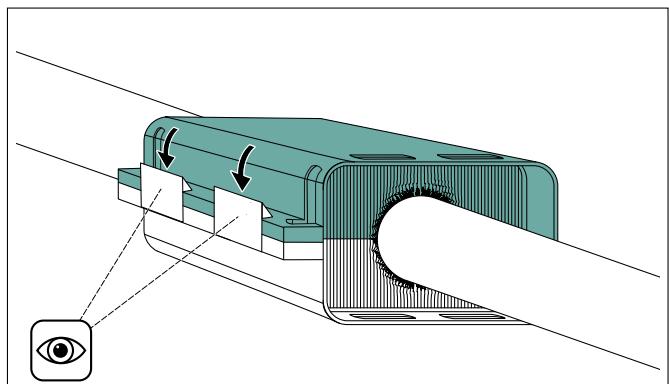

**i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfect protected against dirt and moisture.

- 8 Secure the shell with cable ties against accidental opening.

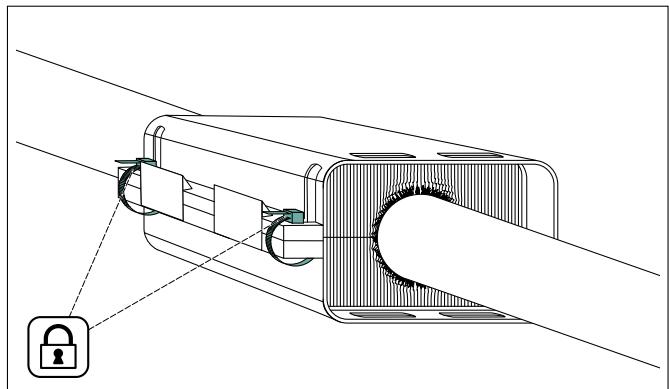


- The product has been successfully installed.


## 5.4 Installing the Relifix V 416

Proceed as follows:


- 1 Strip the cables as shown in the figure and align the cores.
- A: Straight through connection
- B: Branch connection

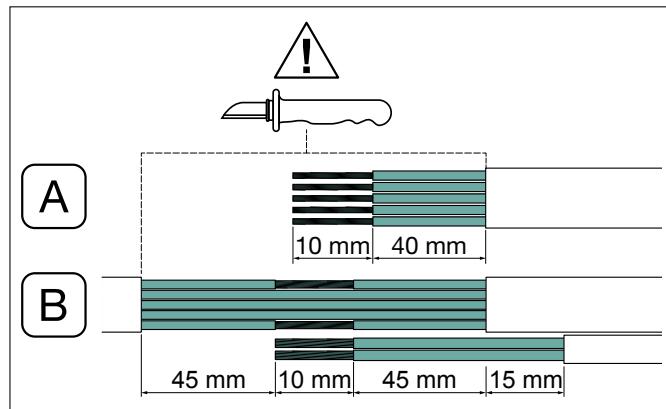


- 2 Align the cores before connecting.

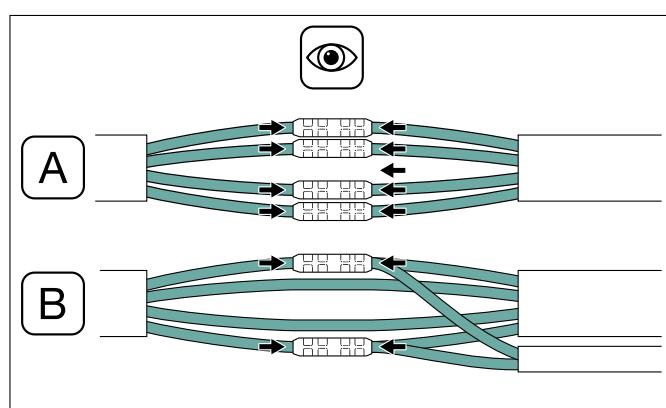


- 3 Connect the cores with the matching press connectors and right tool.

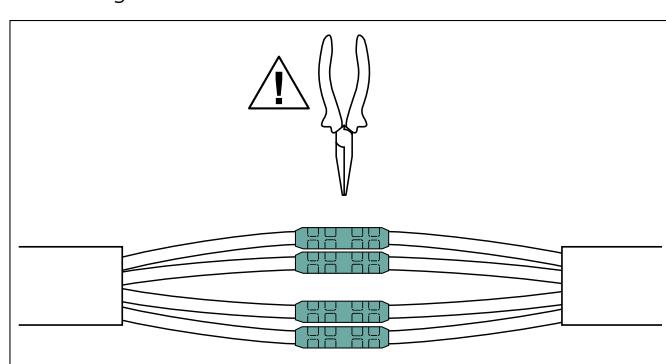

- 4 Open the shell.

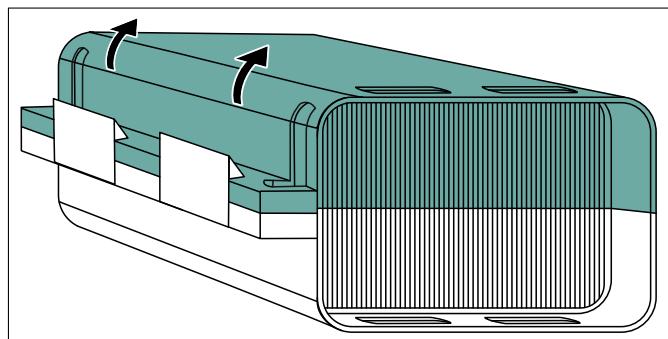


- 5 Cut-in all four brush seals according the diameter of the cables.

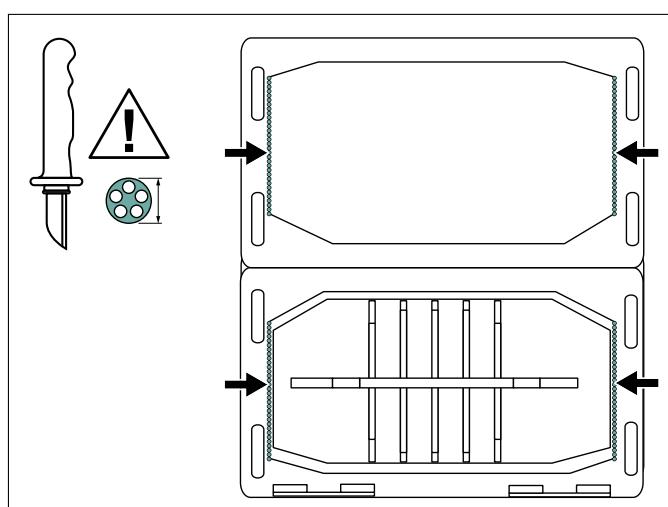


- 6 Position the connector block between the higher ribbed markings in the shell.

- Use the partition plate for cables with three or four cores.

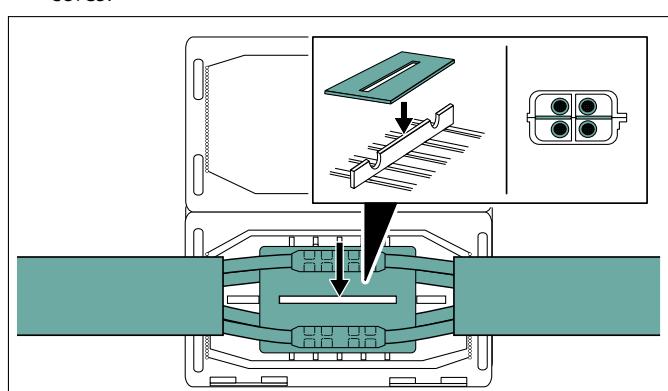


## Installation

- 7 Close the shell until the locking mechanism engages.

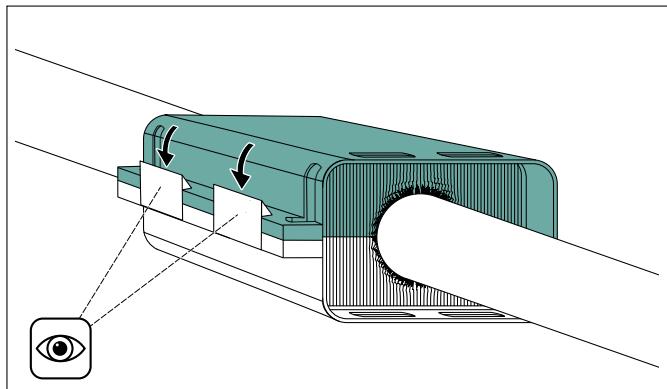

Closing the shell.

- i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfectly protected against dirt and moisture.
- 8 Secure the shell with cable ties against accidental opening.

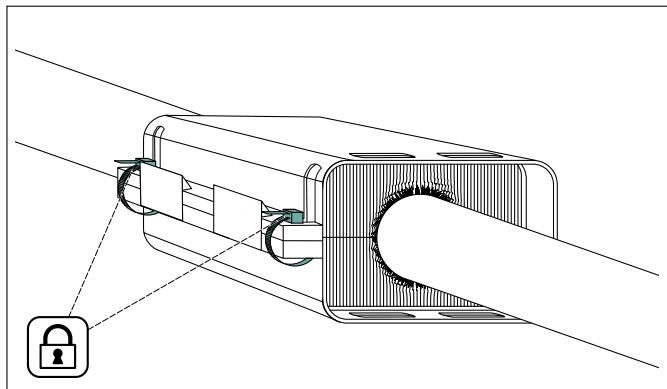


Securing the shell with cable ties.

- The product has been successfully installed.

### 5.5 Installing the Relifix V 135Y


Proceed as follows:

- 1 Strip the cables as shown in the figure and align the cores.

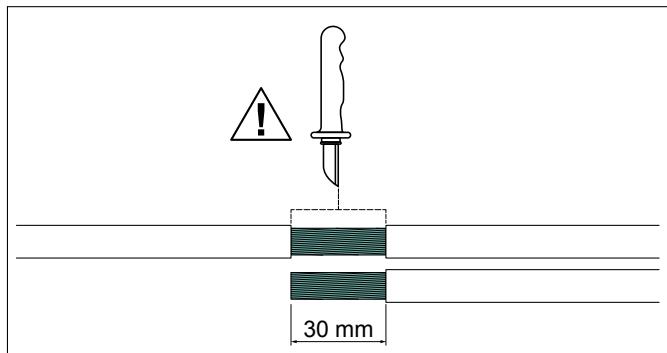

Stripping the cables.


- 2 Insert the cores in the connector block.

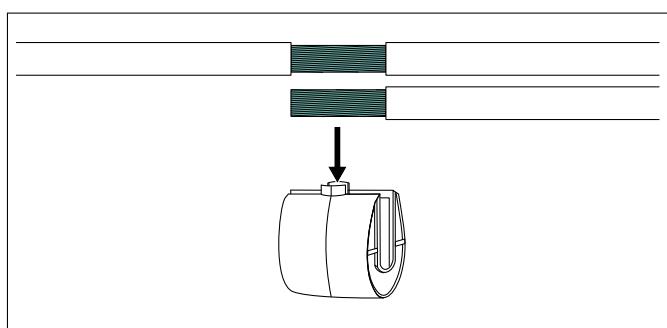

Inserting the cores.


- 3 Connect the cores with the connector block.

- Observe the tightening torque of 15 Nm.

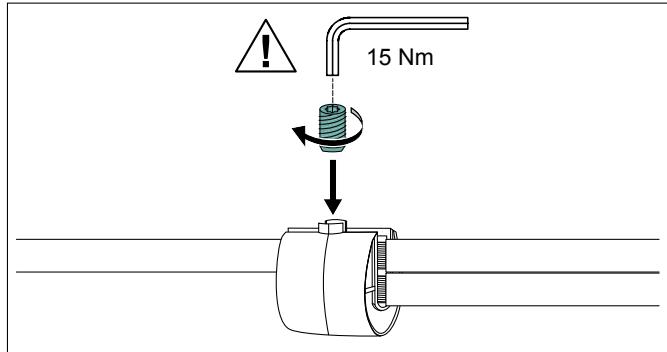


Connecting the cores.

- 4** Open the shell and cut-in all four brush seals according the diameter of the cables.

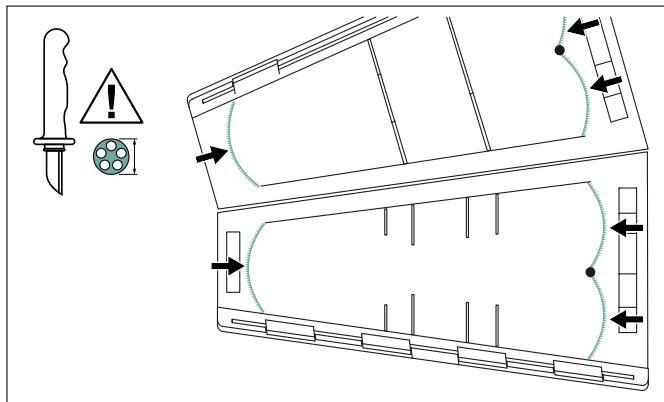


Opening and cutting the shell.

- 5** Position the connector block between the higher ribbed markings in the shell.

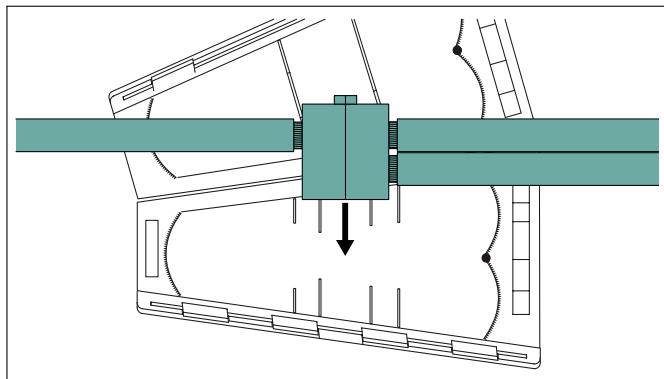


Inserting the connector block.

- 6** Spread the cables.

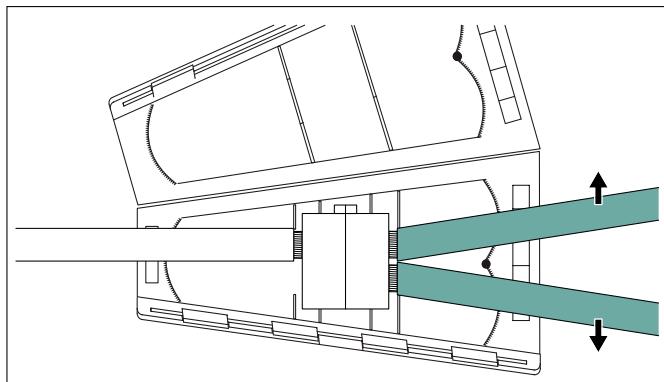

Spreading the cables.


- 7** Close the shell until the locking mechanism engages.

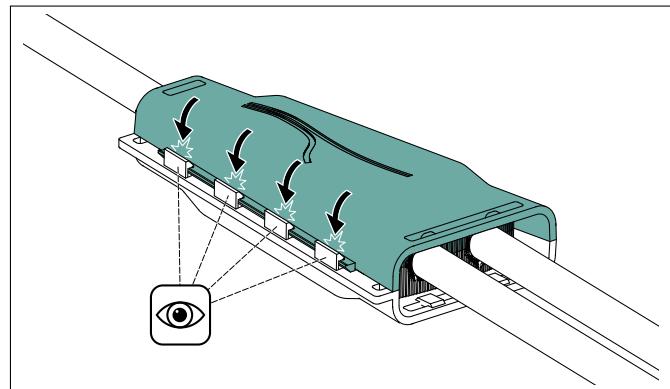

Closing the shell.

**i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfectly protected against dirt and moisture.

- 8** Secure the shell with cable ties against accidental opening.

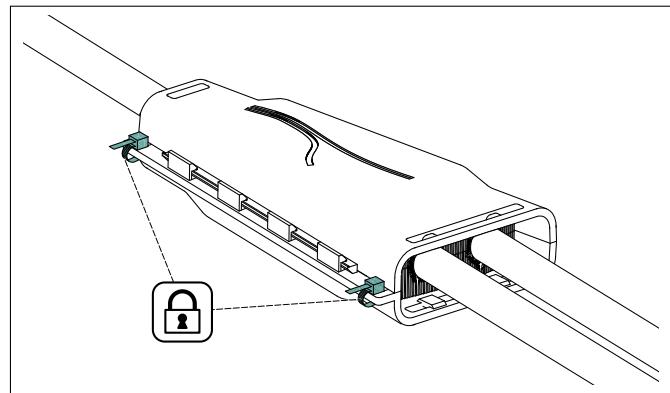

Securing the shell with cable ties.


The product has been successfully installed.

# Installation

## 5.6 Installing the Relifix V 56


Proceed as follows:

- 1 Strip the cables as shown in the figure and align the cores.

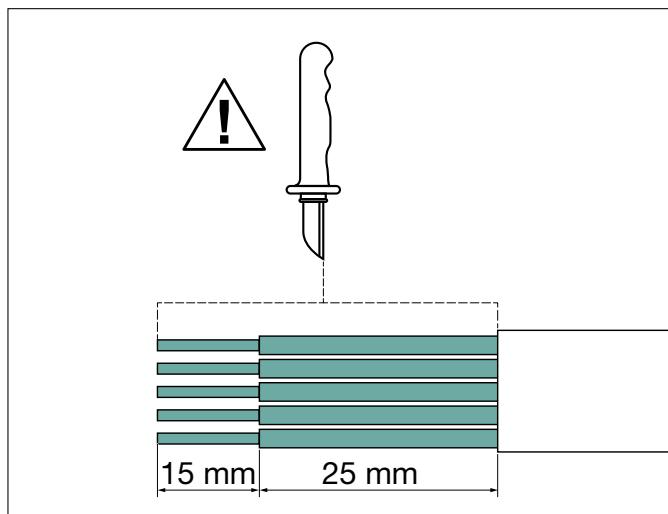

Stripping the cables.


- 2 Align the cores before connecting.

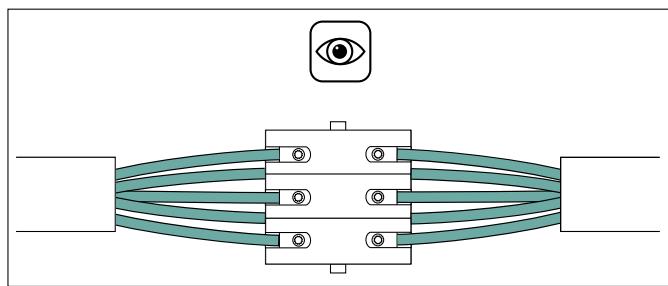

Aligning the cores.


- 3 Connect the cores with the connector block.

- ▶ Note the tightening torque of 3 Nm.

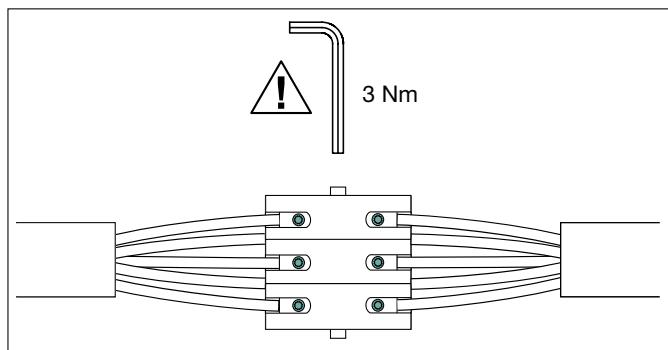


Connecting the cores.

- 4 Open the shell.

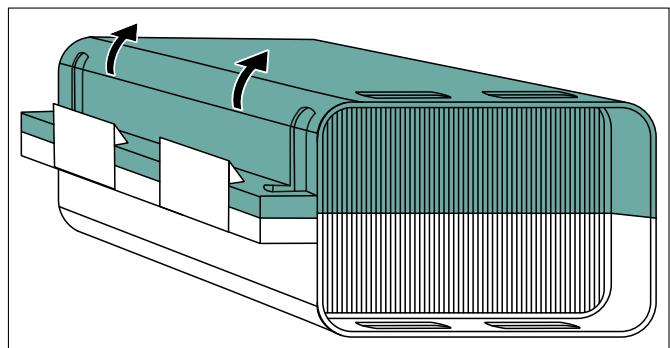


Opening the shell.

- 5 Cut-in all four brush seals according the diameter of the cables.

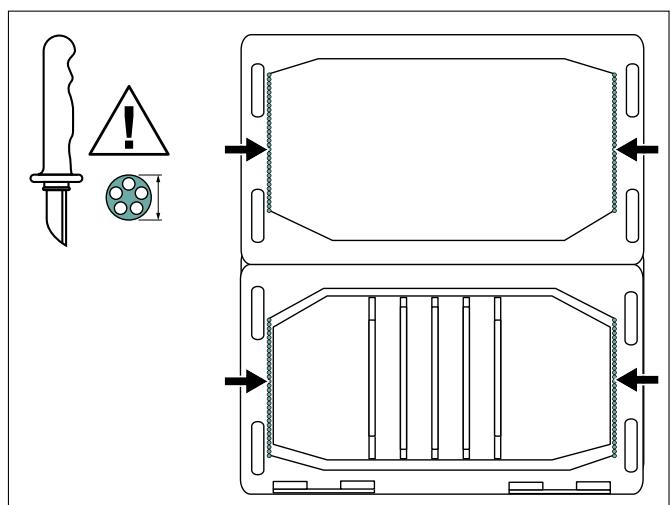


Cutting the brush seals.

- 6 Position the connector block between the higher ribbed markings in the shell.

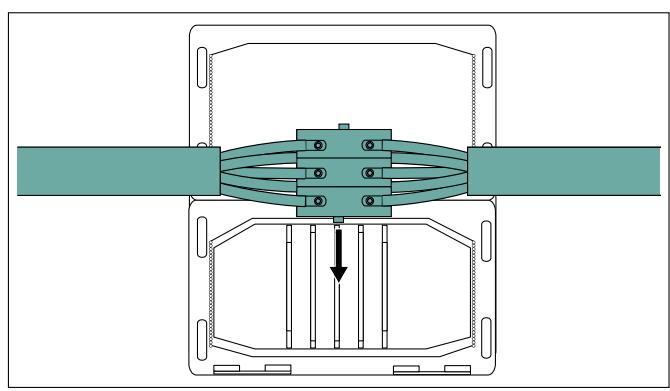


Inserting the connector block.

- 7** Close the shell until the locking mechanism engages.

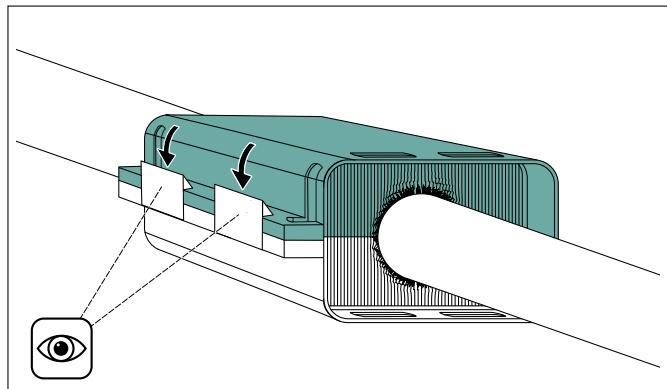

*Closing the shell.*

- i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfectly protected against dirt and moisture.
- 8** Secure the shell with cable ties against accidental opening.

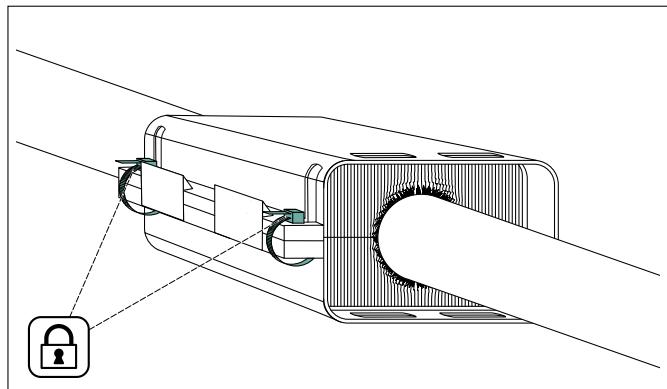


*Securing the shell with cable ties.*

- The product has been successfully installed.

## 5.7 Installing the Relifix V 150


Proceed as follows:

- 1** Strip the cables as shown in the figure and align the cores.

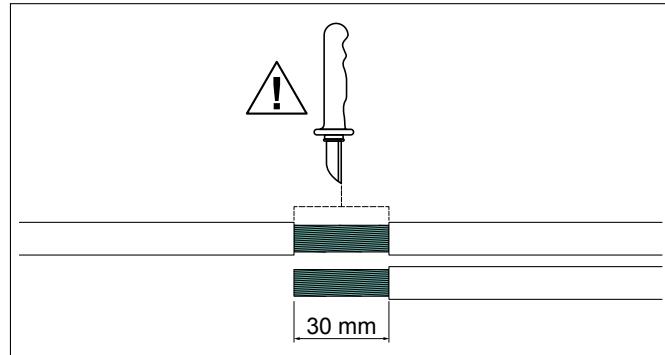

*Stripping the cables.*


- 2** Insert the cores in the connector block.

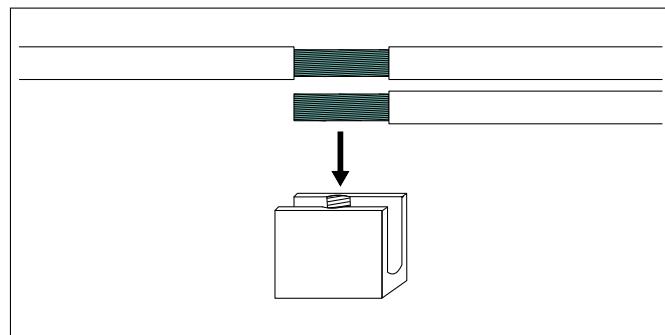

*Inserting the cores.*


- 3** Connect the cores with the connector block.

- Observe the tightening torque of 15 Nm.

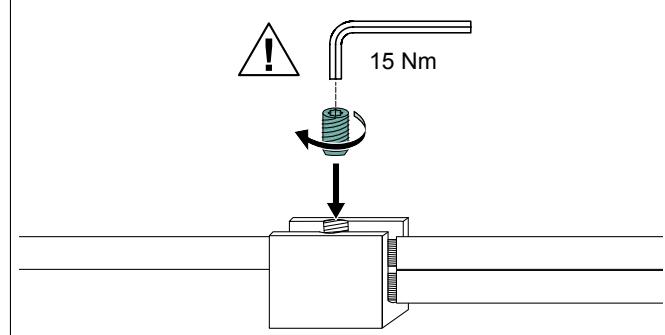

*Connecting the cores.*


- 4** Open the shell.

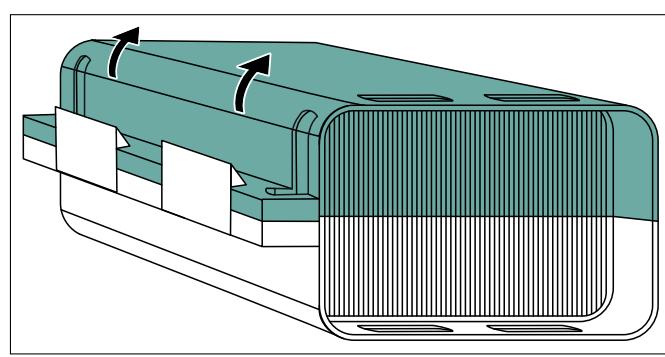

*Opening the shell.*


## Installation

- 5 Cut-in all four brush seals according the diameter of the cables.

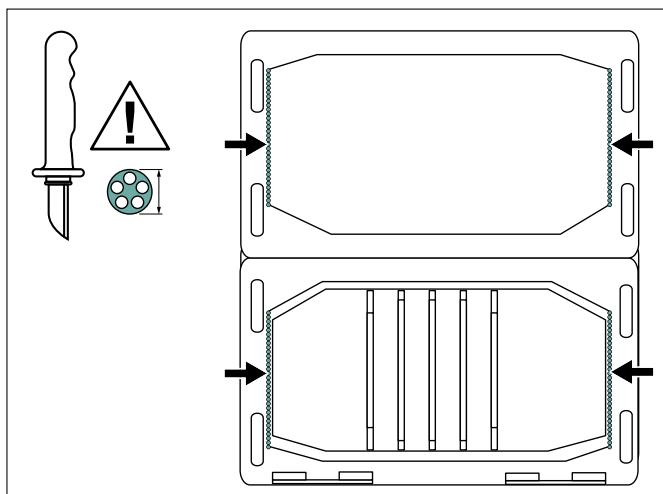

Cutting the brush seals.


- 8 Secure the shell with cable ties against accidental opening.

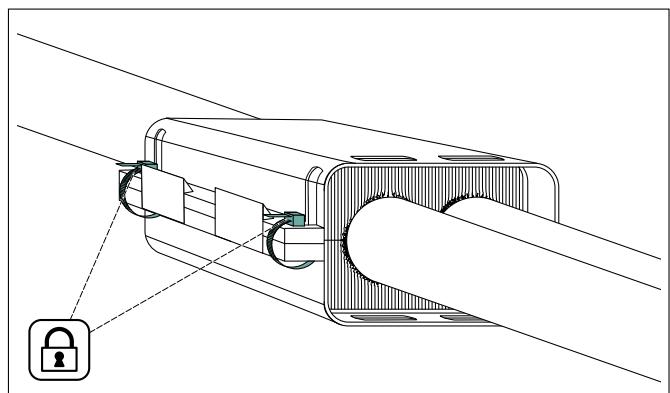

Securing the shell with cable ties.


- The product has been successfully installed.

- 6 Position the connector block between the higher ribbed markings in the shell.

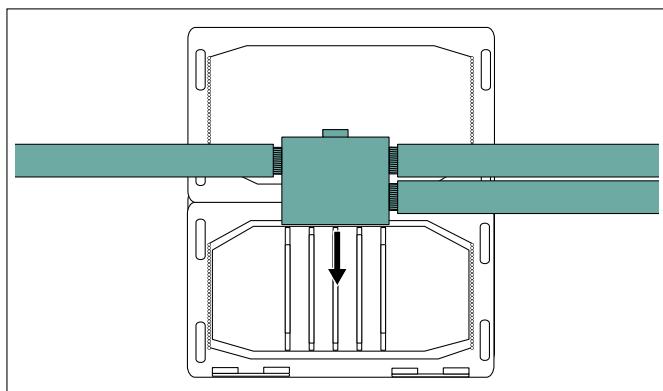

Inserting the connector block.

- 7 Close the shell until the locking mechanism engages.

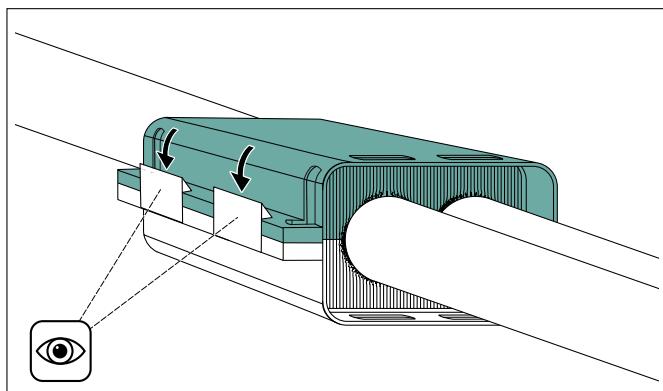


Closing the shell.

- i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfect protected against dirt and moisture.

## 5.8 Installing the Relifix V 506Y


Proceed as follows:

- 1 Strip the cables as shown in the figure and align the cores.

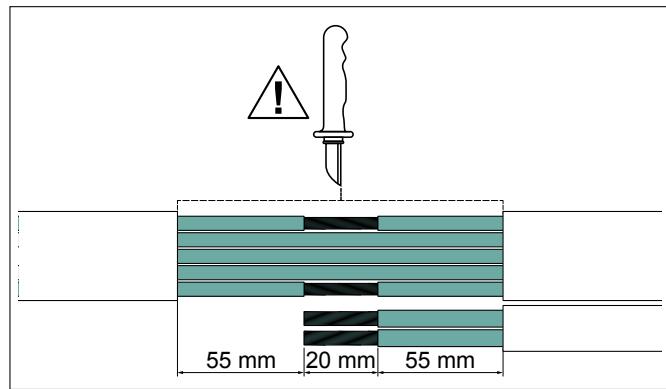

Stripping the cables.


- 2 Align the cores before connecting.

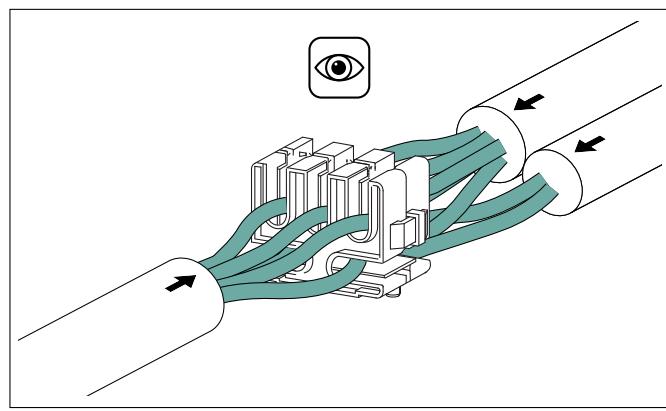

Aligning the cores.


- 3 Connect the cores with the connector block.

- Observe the tightening torque of 10 Nm.

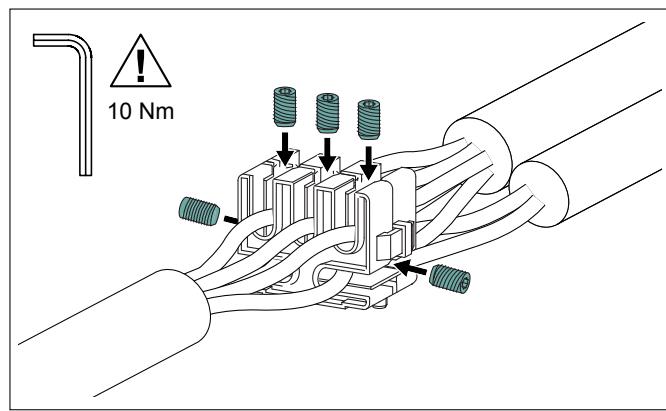


Connecting the cores.

- 4 Open the shell and cut-in all four brush seals according to the diameter of the cables.

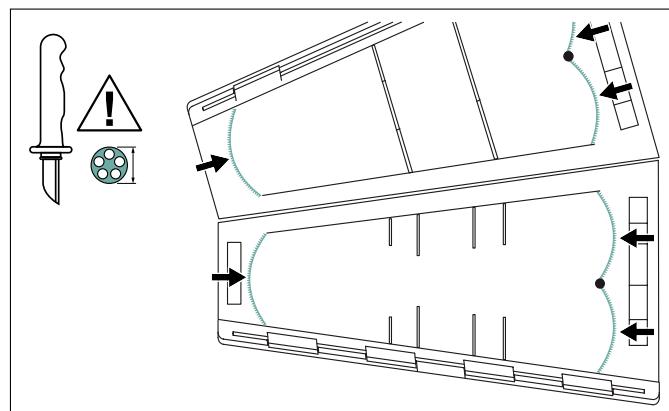


Opening and cutting the shell.

- 5 Position the connector block between the higher ribbed markings in the shell.

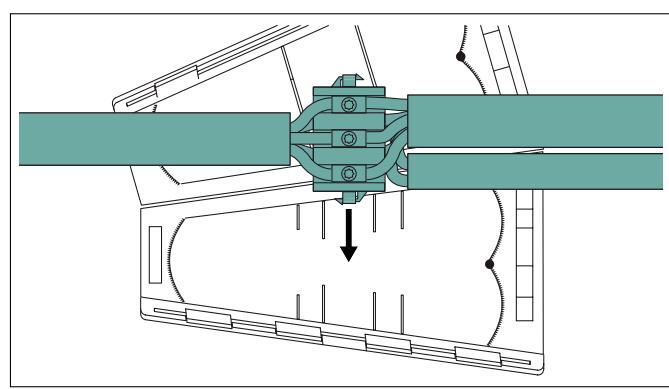

Inserting the connector block.


- 6 Spread the cables.

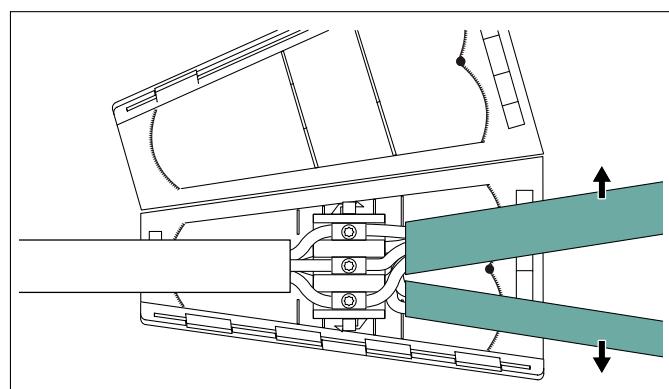

Spreading the cables.


## Installation

- 7 Close the shell until the locking mechanism engages.

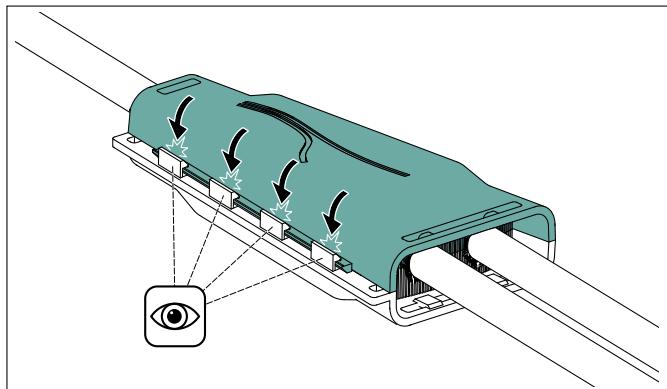

Closing the shell.

- i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfectly protected against dirt and moisture.
- 8 Secure the shell with cable ties against accidental opening.

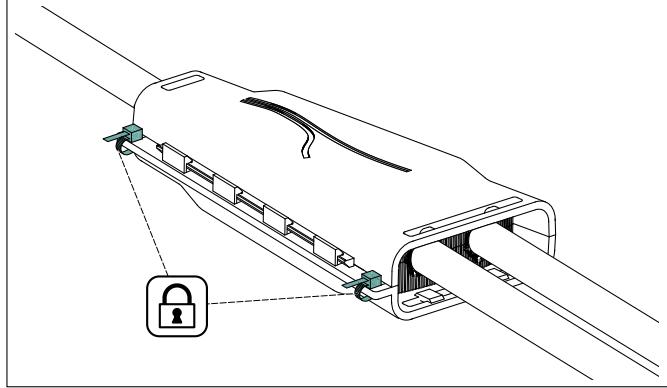


Securing the shell with cable ties.

- The product has been successfully installed.

## 5.9 Installing the Relifix V 525


Proceed as follows:

- 1 Strip the cables as shown in the figure and align the cores.

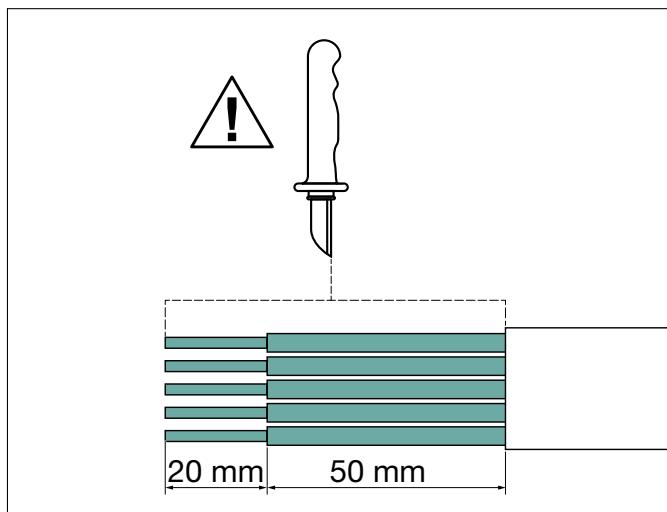

Stripping the cables.


- 2 Align the cores before connecting.

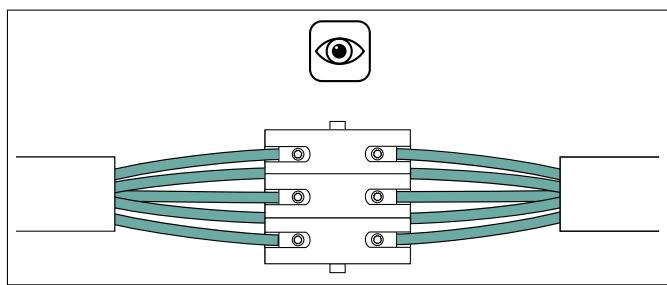

Aligning the cores.


- 3 Connect the cores with the connector block.

- Note the tightening torque of 3 Nm.

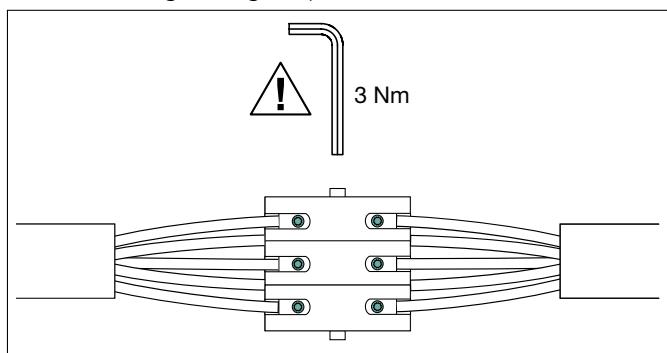


Connecting the cores.

- 4** Open the shell.

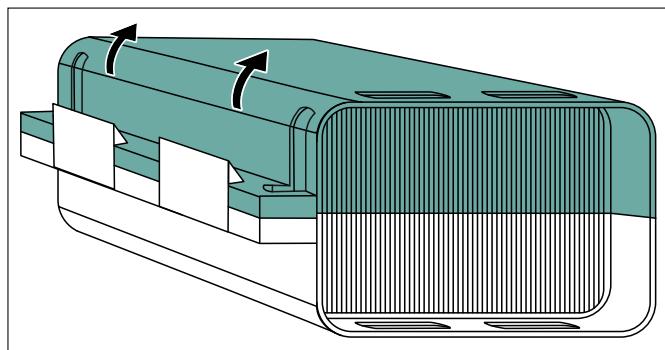


Opening the shell.

- 5** Cut-in all four brush seals according the diameter of the cables.

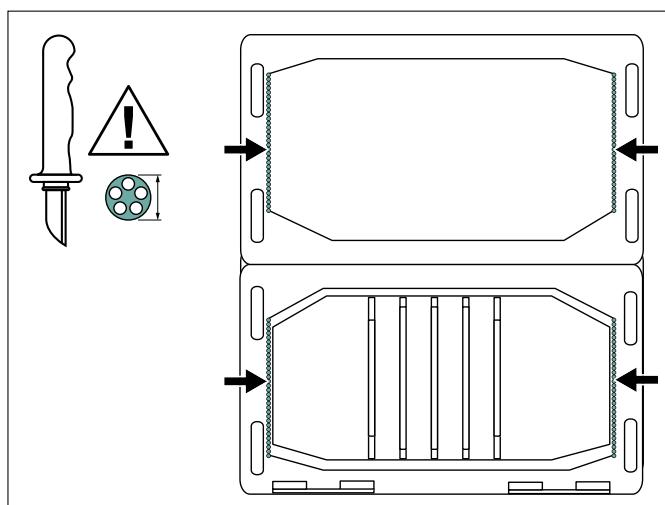


Cutting the brush seals.

- 6** Position the connector block between the higher ribbed markings in the shell.

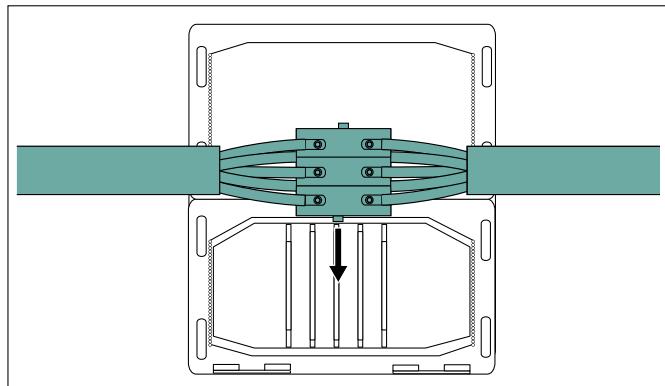

Inserting the connector block.


- 7** Close the shell until the locking mechanism engages.

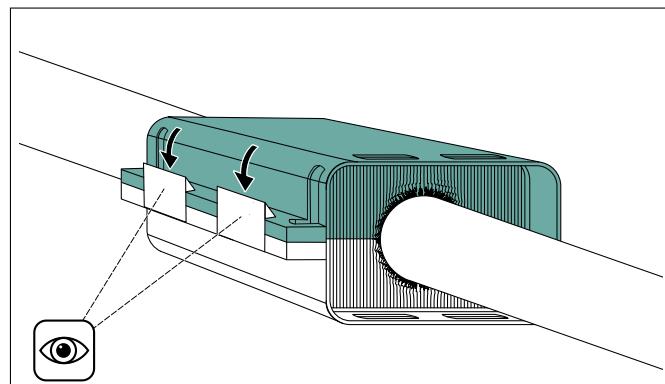

Closing the shell.

**i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfect protected against dirt and moisture.

- 8** Secure the shell with cable ties against accidental opening.

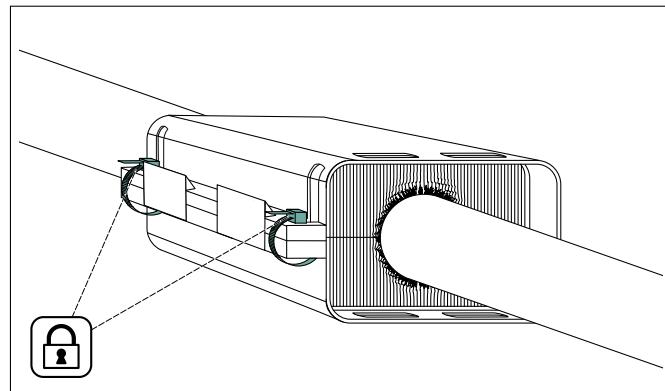

Securing the shell with cable ties.


The product has been successfully installed.

## Installation

### 5.10 Installing the Relifix V 525Y


Proceed as follows:

- 1 Strip the cables as shown in the figure and align the cores.

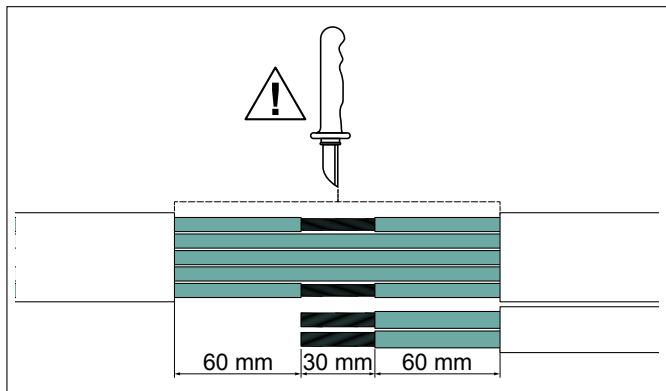

Stripping the cables.


- 2 Align the cores before connecting.

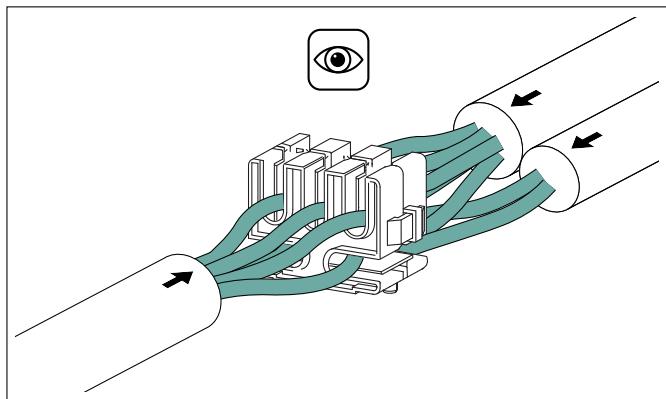

Aligning the cores.


- 3 Connect the cores with the connector block.

- Observe the tightening torque of 15 Nm.

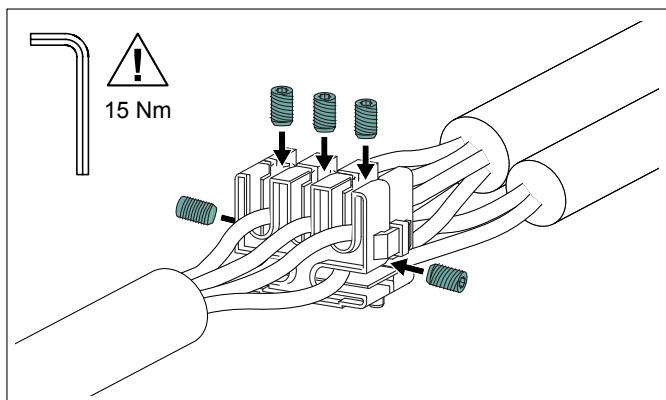


Connecting the cores.

- 4 Open the shell and cut-in all four brush seals according the diameter of the cables.

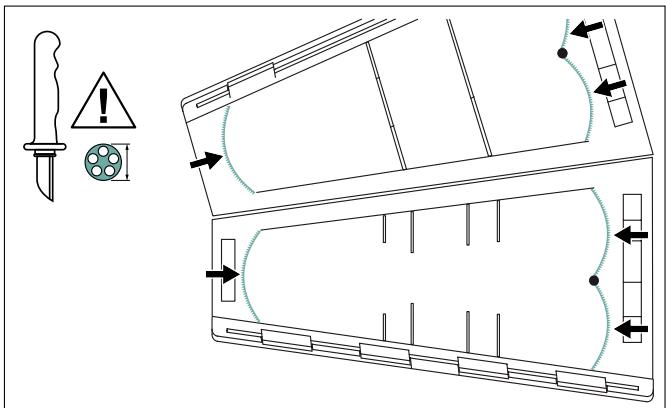


Opening and cutting the shell.

- 5 Position the connector block between the higher ribbed markings in the shell.

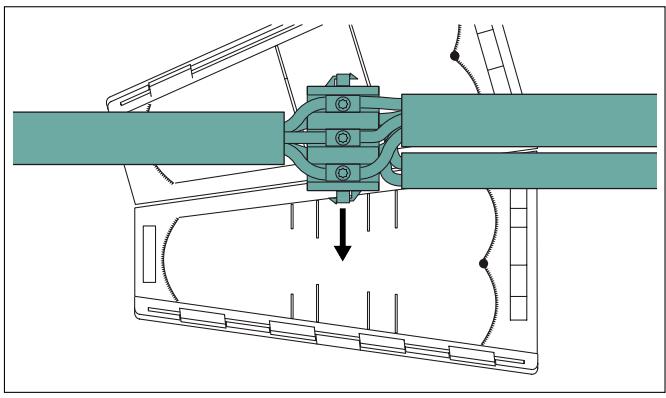


Inserting the cable connection.

- 6 Spread the cables.

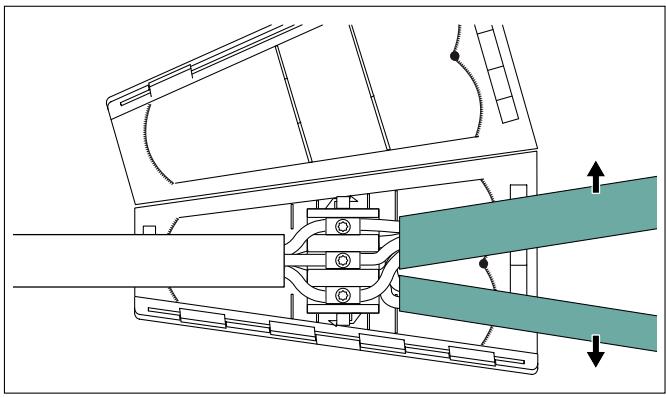


Spreading the cables.

- 7** Close the shell until the locking mechanism engages.

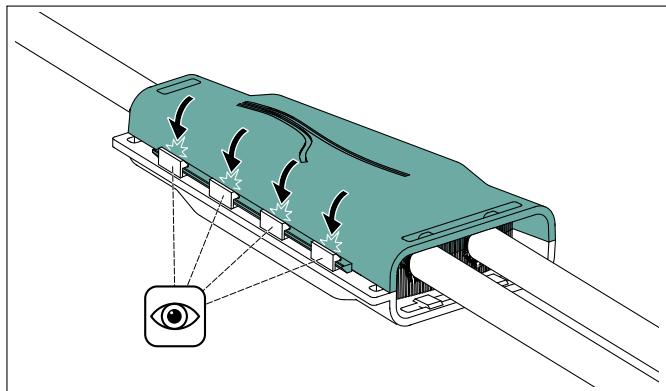

Closing the shell.

- i** A small amount of gel must emerge around the cable sheath while closing the shell to be sure that the joint is perfectly protected against dirt and moisture.
- 8** Secure the shell with cable ties against accidental opening.

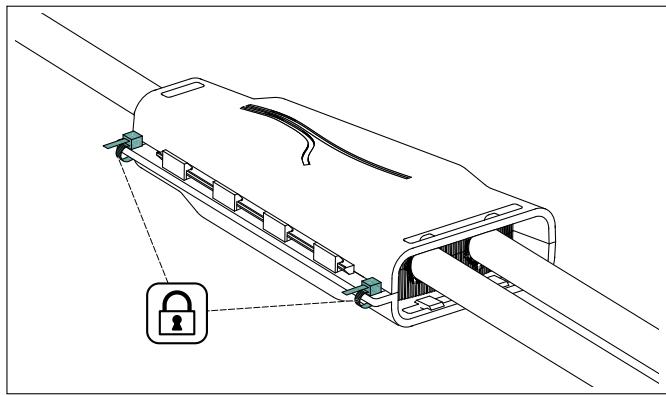

Securing the shell with cable ties.

- The product has been successfully installed.

## 6 Maintenance

The product requires no maintenance.

## 7 Taking out of operation

When installed and used for its intended purpose, the product will perform continuously without issues.

## 8 Disposal

After termination of use, the purchaser or the operator must properly dispose of the product including the accessories.

- ❖ This product was manufactured according to the current environmental protection standards. The materials can be separated and recycled.
- ▶ Observe the national regulations for the disposal of recyclable materials.
- ▶ Do not dispose of the product with domestic waste.
- ▶ Take the product to a local collection point or recycling centre.
- ▶ If necessary, contact your local environmental office.

## 9 Technical data

Characteristics	
<b>Insulating properties</b>	0.6/1 kV
<b>Ageing resistance</b>	Yes
<b>UV resistance</b>	Yes
<b>Weather resistance</b>	Yes
<b>Shelf life</b>	Unlimited
<b>Operating temperature</b>	-20 °C to 90 °C
<b>Scope of application</b>	Interior room, outside, in water, in the ground and in installation ducts

### Relifix V 31.5

<b>Length</b>	86 mm	
<b>Width</b>	47 mm	
<b>Height</b>	27 mm	
<b>Cable diameter</b>	9 mm - 16 mm	
<b>Conductor cross-section</b>	min.	3 x 0.5 mm <sup>2</sup>
	max.	3 x 2.5 mm <sup>2</sup>

## Technical data

<b>Relifix V 516</b>	<b>Relifix V 56</b>
<b>Length</b>	180 mm
<b>Width</b>	69 mm
<b>Height</b>	40 mm
<b>Cable diameter</b>	9 mm - 22 mm
<b>Conductor cross-section</b>	min. 3 x 6 mm <sup>2</sup>
	max. 5 x 16 mm <sup>2</sup>
<b>Relifix V 410</b>	<b>Relifix V 150</b>
<b>Length</b>	146 mm
<b>Width</b>	55 mm
<b>Height</b>	35 mm
<b>Cable diameter</b> <b>Main cable 2</b>	9 mm - 20 mm
<b>Cable diameter</b> <b>Main cable 1</b>	9 mm - 16 mm
<b>Conductor cross-section</b> <b>Main cable 2</b>	min. 3 x 1.5 mm <sup>2</sup>
	max. 4 x 10 mm <sup>2</sup>
<b>Conductor cross-section</b> <b>Main cable 1</b>	min. 3 x 1.5 mm <sup>2</sup>
	max. 4 x 2.5 mm <sup>2</sup>
<b>Relifix 416</b>	<b>Relifix V 506Y</b>
<b>Length</b>	220 mm
<b>Width</b>	110 mm
<b>Height</b>	53 mm
<b>Cable diameter</b> <b>Main cable 2</b>	9 mm - 20 mm
<b>Cable diameter</b> <b>Main cable 1</b>	9 mm - 17 mm
<b>Conductor cross-section</b> <b>Main cable 2</b>	min. 3 x 1.5 mm <sup>2</sup>
	max. 4 x 16 mm <sup>2</sup>
<b>Conductor cross-section</b> <b>Main cable 1</b>	min. 3 x 1.5 mm <sup>2</sup>
	max. 4 x 4 mm <sup>2</sup>
<b>Relifix V 135Y</b>	<b>Relifix V 525</b>
<b>Length</b>	240 mm
<b>Width</b>	75 mm
<b>Height</b>	48 mm
<b>Cable diameter</b> <b>Main cable 2</b>	9 mm - 30 mm
<b>Cable diameter</b> <b>Main cable 1</b>	9 mm - 14 mm
<b>Conductor cross-section</b> <b>Main cable 2</b>	min. 1 x 10 mm <sup>2</sup>
	max. 1 x 35 mm <sup>2</sup>
<b>Conductor cross-section</b> <b>Main cable 1</b>	min. 1 x 2.5 mm <sup>2</sup>
	max. 1 x 25 mm <sup>2</sup>
<b>Relifix V 525Y</b>	
<b>Length</b>	260 mm
<b>Width</b>	130 mm
<b>Height</b>	65 mm
<b>Cable diameter</b> <b>(Main cable 2/Main cable 1)</b>	9 mm - 30 mm
<b>Conductor cross-section</b> <b>Main cable 2</b>	min. 3 x 16 mm <sup>2</sup>
	max. 5 x 25 mm <sup>2</sup>
<b>Conductor cross-section</b> <b>Main cable 1</b>	min. 3 x 2.5 mm <sup>2</sup>
	max. 5 x 25 mm <sup>2</sup>

All dimensions in mm. We reserve the right to make technical changes without notice.  
Minimum order quantities (MOQ) can deviate from the package contents.

# HellermannTyton operates globally in 37 countries



## Europe

### HellermannTyton GmbH – Austria

Rennbahnweg 65  
1220 Vienna  
Tel.: +43 12 59 99 55-0  
Fax: +43 12 59 99 11  
Email: office@HellermannTyton.at  
[www.HellermannTyton.at](http://www.HellermannTyton.at)

### HellermannTyton – Czech Republic

Email: officeCZ@HellermannTyton.at  
[www.HellermannTyton.cz](http://www.HellermannTyton.cz)

### HellermannTyton – Denmark

Industrivej 44A, 1.  
4000 Roskilde  
Tel.: +45 702 371 20  
Fax: +45 702 371 21  
Email: htdk@HellermannTyton.dk  
[www.HellermannTyton.dk](http://www.HellermannTyton.dk)

### HellermannTyton – Finland

Sähkötie 8  
01510 Vantaa  
Tel.: +358 9 8700 450  
Fax: +358 9 8700 4520  
Email: myynti@HellermannTyton.fi  
[www.HellermannTyton.fi](http://www.HellermannTyton.fi)

### HellermannTyton S.A.S. – France

2 rue des Hêtres - CS 80543  
78197 Trappes Cedex  
Tel.: +33 1 30 13 80 00  
Fax: +33 1 30 13 80 00  
Email: info@HellermannTyton.fr  
[www.HellermannTyton.fr](http://www.HellermannTyton.fr)

### HellermannTyton GmbH – Germany

Große Moorweg 45  
25436 Tornesch  
Tel.: +49 4122 701-0  
Fax: +49 4122 701-400  
Email: info@HellermannTyton.de  
[www.HellermannTyton.de](http://www.HellermannTyton.de)

### HellermannTyton KFT – Hungary

Kisfaludy u. 13  
1044 Budapest  
Tel.: +36 1 369 4151  
Fax: +36 1 369 4151  
Email: officeHU@HellermannTyton.at  
[www.HellermannTyton.hu](http://www.HellermannTyton.hu)

### HellermannTyton Ltd – Ireland

Unit 77 Cherry Orchard  
Industrial Estate  
Ballyfermot, Dublin 10  
Tel.: +353 1 626 8267  
Fax: +353 1 626 8022  
Email: sales@HellermannTyton.ie  
[www.HellermannTyton.co.uk](http://www.HellermannTyton.co.uk)

### HellermannTyton S.r.l. – Italy

Via Visco, 3/5  
35010 Limena (PD)  
Tel.: +39 049 767 870  
Fax: +39 049 767 985  
Email: info@HellermannTyton.it  
[www.HellermannTyton.it](http://www.HellermannTyton.it)

### HellermannTyton B.V. – Belgium/Netherlands

Vanadiumweg 11-C  
3812 PX Amersfoort  
Tel.: +31 33 460 06 90  
Fax: +31 33 460 06 99  
Email (NL): info@HellermannTyton.nl  
Email (BE): info@HellermannTyton.be  
[www.HellermannTyton.nl](http://www.HellermannTyton.nl)  
[www.HellermannTyton.be](http://www.HellermannTyton.be)

### HellermannTyton AS – Norway

PO Box 240 Alnabru  
0614 Oslo  
Tel.: +47 23 17 47 00  
Fax: +47 22 97 09 70  
Email: firmapost@HellermannTyton.no  
[www.HellermannTyton.no](http://www.HellermannTyton.no)

### HellermannTyton Sp. z o.o. – Poland

Kotunia 111  
62-400 Ślupca  
Tel.: +48 63 2237111  
Fax: +48 63 2237110  
Email: info@HellermannTyton.pl  
[www.HellermannTyton.pl](http://www.HellermannTyton.pl)

### HellermannTyton – Romania

Email: officeRO@HellermannTyton.at  
[www.HellermannTyton.at](http://www.HellermannTyton.at)

### OOO HellermannTyton – Russia

40/4, Pulkovskoe road  
BC Technopolis Pulkovo, office A 8081  
196158, St. Petersburg  
Tel.: +7 812 386 00 09  
Fax: +7 812 386 00 08  
Email: info@HellermannTyton.ru  
[www.HellermannTyton.ru](http://www.HellermannTyton.ru)

### HellermannTyton – Slovenia

Branch Office Ljubljana  
Podružnica Ljubljana, Leskočkova 6  
1000 Ljubljana  
Tel.: +386 1 433 70 56  
Fax: +386 1 433 63 21  
Email: officeSI@HellermannTyton.at  
[www.HellermannTyton.si](http://www.HellermannTyton.si)

### HellermannTyton España s.l. – Spain/Portugal

Avda. de la Industria 37 2 2  
28108 Alcobendas, Madrid  
Tel.: +34 91 661 2835  
Fax: +34 91 661 2368  
Email:  
HellermannTyton@HellermannTyton.es  
[www.HellermannTyton.es](http://www.HellermannTyton.es)

### HellermannTyton AB – Sweden

Isafjordsgatan 5  
16440 Kista  
Tel.: +46 8 580 890 00  
Fax: +46 8 580 348 02  
Email: kundsupport@HellermannTyton.se  
[www.HellermannTyton.se](http://www.HellermannTyton.se)

### HellermannTyton

#### Engineering GmbH – Turkey

Saray Mah Dr. Adnan Büyükdelen Cad. No:4  
Akkom Office Park 2. Blok Kat: 10  
34768 Ümraniye-İstanbul  
Tel.: +90 216 687 03 40  
Fax: +90 216 250 32 32  
Email: info@HellermannTyton.com.tr  
[www.HellermannTyton.com.tr](http://www.HellermannTyton.com.tr)

### HellermannTyton Ltd – UK

William Prince Road  
Plymouth International Medical  
and Technology Park  
Plymouth, Devon PL6 5WR  
Tel.: +44 1752 701 261  
Fax: +44 1752 790 058  
Email: info@HellermannTyton.co.uk  
[www.HellermannTyton.co.uk](http://www.HellermannTyton.co.uk)

### HellermannTyton Ltd – UK

Sharston Green Business Park  
1 Robeson Way  
Altringham Road, Wythenshawe  
Manchester M22 4TY  
Tel.: +44 161 947 2200  
Fax: +44 161 947 2220  
Email: sales@HellermannTyton.co.uk  
[www.HellermannTyton.co.uk](http://www.HellermannTyton.co.uk)

### HellermannTyton Ltd – UK

Cley Road, Kingswood Lakeside  
Cannock, Staffordshire  
WS11 8AA  
Tel.: 01543-728282  
Freephone line: 0808-1642204  
Fax: 01543-728284  
Email: info@HellermannTyton.co.uk  
[www.HellermannTyton.co.uk](http://www.HellermannTyton.co.uk)

### HellermannTyton Data Ltd – UK

Cornwell Business Park  
43-45 Salthouse Road, Brackmills  
Northampton NN4 7EX  
Tel.: +44 1604 707 420  
Fax: +44 1604 705 454  
Email: sales@htdata.co.uk  
[www.htdata.co.uk](http://www.htdata.co.uk)

## Middle East

### HellermannTyton – UAE

Email: info@HellermannTyton.ae  
[www.HellermannTyton.ae](http://www.HellermannTyton.ae)

## North America

### HellermannTyton – Canada

Tel.: +1 905 726 1221  
Fax: +1 905 726 8538  
Email: sales@HellermannTyton.ca  
[www.HellermannTyton.ca](http://www.HellermannTyton.ca)

### HellermannTyton – Mexico

Tel.: +52 333 133 9880  
Fax: +52 333 133 9861  
Email: info@HellermannTyton.com.mx  
[www.HellermannTyton.com.mx](http://www.HellermannTyton.com.mx)

### HellermannTyton – USA

Tel.: +1 414 355 1130  
Fax: +1 414 355 7341  
Email: corp@htamericas.com  
[www.HellermannTyton.com](http://www.HellermannTyton.com)

## South America

### HellermannTyton – Argentina

Tel.: +54 11 4754 5400  
Fax: +54 11 4752 0374  
Email: ventas@HellermannTyton.com.ar  
[www.HellermannTyton.com.ar](http://www.HellermannTyton.com.ar)

### HellermannTyton – Brazil

Tel.: +55 11 4815 9000  
Fax: +55 11 4815 9030  
Email: vendas@HellermannTyton.com.br  
[www.HellermannTyton.com.br](http://www.HellermannTyton.com.br)

## Asia-Pacific

### HellermannTyton – Australia

Tel.: +61 2 9525 2133  
Fax: +61 2 9526 2495  
Email: cservice@HellermannTyton.com.au  
[www.HellermannTyton.com.au](http://www.HellermannTyton.com.au)

### HellermannTyton – China

Tel.: +86 510 8528 2536  
Fax: +86 510 8528 2731  
Email: cservice@HellermannTyton.com.cn  
[www.HellermannTyton.com.cn](http://www.HellermannTyton.com.cn)

### HellermannTyton – Hong Kong

Tel.: +852 2831 9090  
Fax: +852 2832 9381  
Email: cservice@HellermannTyton.com.hk  
[www.HellermannTyton.com.sg](http://www.HellermannTyton.com.sg)

### HellermannTyton – India

Tel.: +91 120 413 3384  
Bangalore: +91 776 001 0104  
Chennai: +91 996 264 3939  
Faridabad: +91 971 851 7797  
Ghaziabad: +91 93 1354 1671  
Pune: +91 727 601 2200  
Email: cservice@HellermannTyton.co.in  
[www.HellermannTyton.co.in](http://www.HellermannTyton.co.in)

### HellermannTyton – Japan

Tel.: +81 3 5790 3111  
Fax: +81 3 5790 3112  
Email: mkt@hellermanntyton.co.jp  
[www.HellermannTyton.co.jp](http://www.HellermannTyton.co.jp)

### HellermannTyton – Republic of Korea

Tel.: +82 31 388 8012  
Fax: +82 31 388 8013  
Email: cservice@HellermannTyton.co.kr  
[www.HellermannTyton.co.kr](http://www.HellermannTyton.co.kr)

### HellermannTyton – Philippines

Tel.: +63 2 752 6551  
Fax: +63 2 752 6553  
Email: cservice@HellermannTyton.com.ph  
[www.HellermannTyton.com.ph](http://www.HellermannTyton.com.ph)

### HellermannTyton – Singapore

Tel.: +65 6 586 1919  
Fax: +65 6 752 2527  
Email: cservice@HellermannTyton.sg  
[www.HellermannTyton.com.sg](http://www.HellermannTyton.com.sg)

### HellermannTyton – Thailand

Tel.: +662 237 6702 / 266 0624  
Fax: +662 266 8664  
Email: cservice@HellermannTyton.co.th  
[www.HellermannTyton.com.sg](http://www.HellermannTyton.com.sg)

## Africa

### HellermannTyton – South Africa

Tel.: +27 11 879 6680  
Fax: +27 11 879 6601  
Email: sales.jhb@HellermannTyton.co.za  
[www.HellermannTyton.co.za](http://www.HellermannTyton.co.za)

